



Refrigeration Controls

Instructions

Spare parts for AKV 15 and AKVA 15



068R9550



RI1PP553

Danfoss
A68F503.10

DANFOSS
A68F462.12

DANFOSS
A68F472.10






AKVA 15 only

AKVA 15 only

AKVA 15 only

| Code no. | 068F-0540 | 068F-0548 | 068F-0549 | 068F-5045 | 068F-5261 | 068F-5263 | 068F-5264 | 068F-5265 | 068F-5266 | 068F-5267 | 068F-5268 |
|----------|-------------|-----------|-----------|-------------|-----------|-----------|-----------|-------------|-------------|-------------|-------------|
| Type | AKV AKVA | AKVA | AKV | AKV AKVA | AKVA | AKV | AKVA | AKV AKVA | AKV AKVA | AKV AKVA | AKV AKVA |
| | | | | | | 10 | 10 | | | | |
| | | | | | | 10 | 10 | | | | |
| | | | | 1 | | | | | | | |
| | 10 Al | 25 Al | 25 Cu | 1 Al | 1 Al | 10 Cu | 10 Al | | | | |
| | 10 | | | | | | | | | | |
| | | | | | 1 | | | | | | |
| | 1 | | | | | | | 1 | | | |
| | 2 | | | | | | | | 1 | | |
| | 3 | | | | | | | | | 1 | |
| | 4 | | | | | | | | | | 1 |
| | | | | | 1 | 10 | 10 | 1 | 1 | 1 | 1 |
| | | | | | 1 | 10 | 10 | 1 | 1 | 1 | 1 |
| | | | | | 1 | | | | | | |
| | | | | | 1 Al | | 10 Al | | | | |
| | | | | | | | 20 | | | | |

Pakningen skal skiftes, hvis ventilen adskilles.
 The gasket must be exchanged, if the valve is dismantled.
 Bei Zerlegung des Ventils muß die Dichtung ausgewechselt werden.
 Changer le joint chaque fois que la vanne est démontée.
 Es preciso cambiar la junta si se desmonta la válvula.

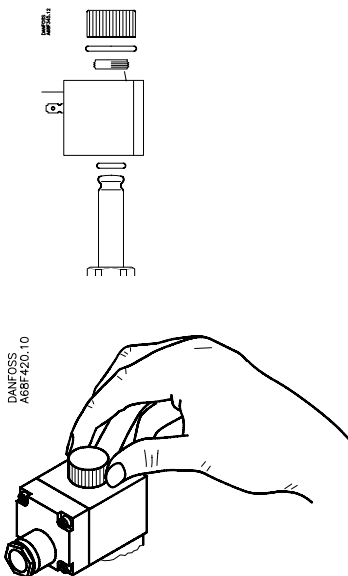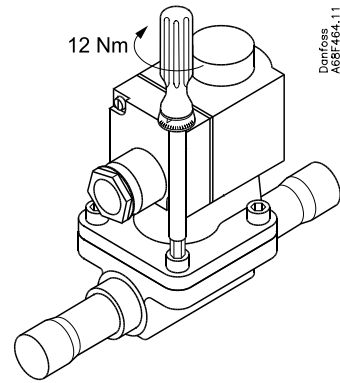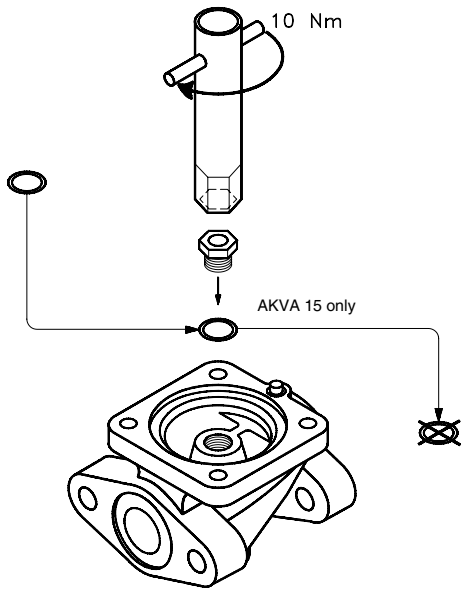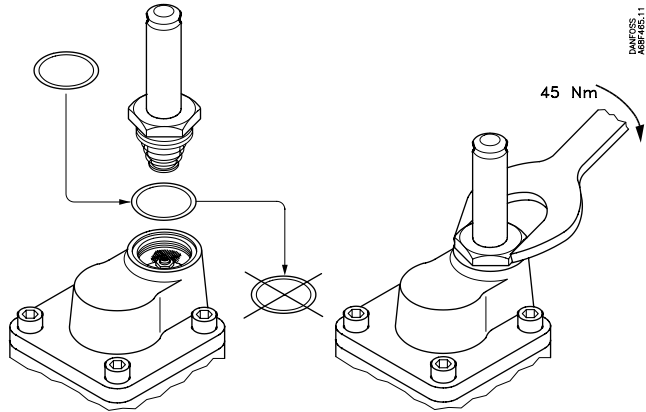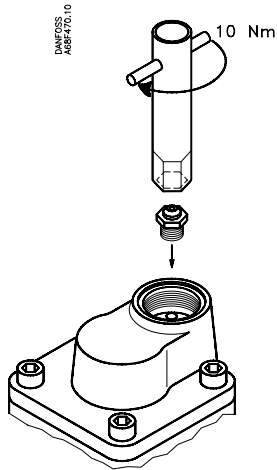

Click-on coil

