


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F0705  
PMFH, size 200

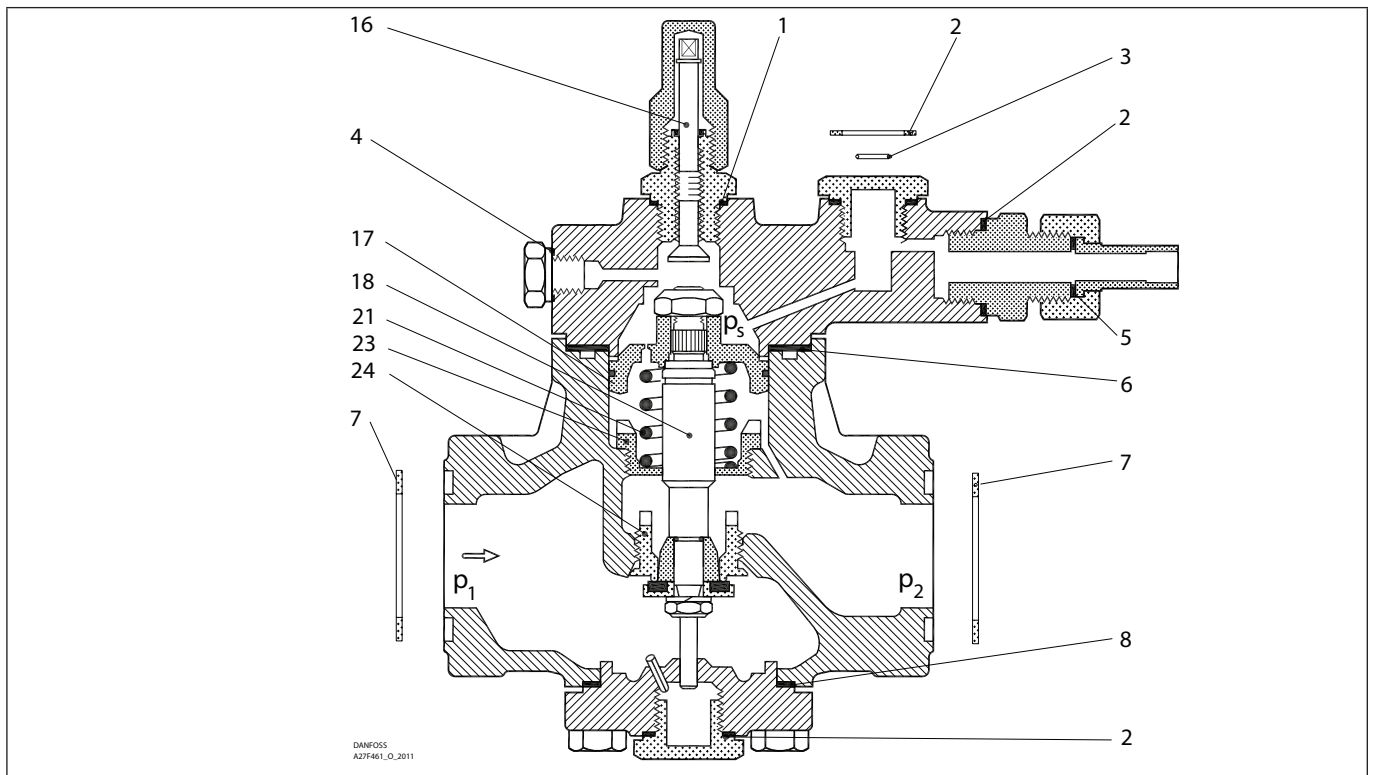

<p><b>1</b></p> <p>Alu.</p> <p>Total no. = 1</p>	<p><b>2</b></p> <p>Fibre</p> <p>Total no. = 4</p>	<p><b>3</b></p> <p>Total no. = 3</p>	<p><b>4</b></p> <p>Alu.</p> <p>Total no. = 1</p>	<p><b>5</b></p> <p>Alu.</p> <p>Total no. = 1</p>	<p><b>6</b></p> <p>Fibre</p> <p>Total no. = 1</p>
<p><b>7</b></p> <p>Fibre</p> <p>Total no. = 2</p>	<p><b>8</b></p> <p>Fibre</p> <p>Total no. = 1</p>	<p><b>9*</b></p> <p>Alu.</p> <p>Total no. = 1</p>	<p><b>10*</b></p> <p>Alu.</p> <p>Total no. = 1</p>	<p><b>16</b></p>	<p><b>17</b></p>
<p><b>18</b></p>	<p><b>21</b></p> <p>Standard</p> <p>Total no. = 1</p> <p>Weak</p> <p>Total no. = 1</p>	<p><b>23</b></p>	<p><b>24</b></p>		

\* The spare part is included in the package but is not used for PMFH size 200.