


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F3381
PM, size 10

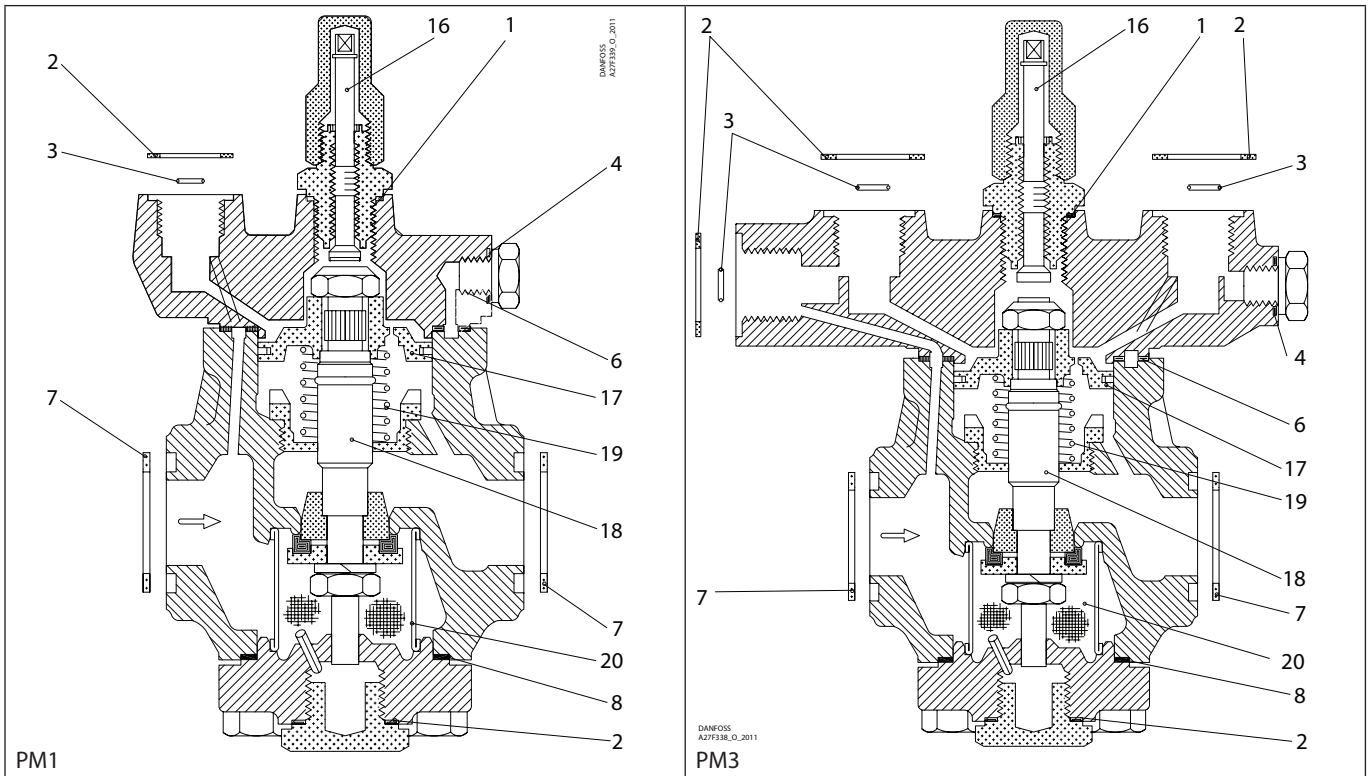

<p>1</p> <p> = Alu.</p> <p> $\frac{\text{Ø}26 \text{ mm}}{\text{Ø}1.02''}$</p> <p>Total no. = 1</p>	<p>2</p> <p> = Fibre</p> <p> $\frac{\text{Ø}33 \text{ mm}}{\text{Ø}1.28''}$</p> <p>Total no. = 4</p>	<p>3</p> <p> = Alu.</p> <p> $\frac{\text{Ø}9 \text{ mm}}{\text{Ø}0.36''}$</p> <p>Total no. = 3</p>	<p>4</p> <p> = Alu.</p> <p> $\frac{\text{Ø}18 \text{ mm}}{\text{Ø}0.70''}$</p> <p>Total no. = 1</p>	<p>5*</p> <p> = Alu.</p> <p> $\frac{\text{Ø}14 \text{ mm}}{\text{Ø}0.55''}$</p> <p>Total no. = 1</p>	<p>6</p> <p> = Fibre</p> <p> $\frac{\text{Ø}75 \text{ mm}}{\text{Ø}2.95''}$</p> <p>Total no. = 1</p>
<p>7</p> <p> = Fibre</p> <p> $\frac{\text{Ø}39 \text{ mm}}{\text{Ø}1.54''}$</p> <p>Total no. = 2</p>	<p>8</p> <p> = Fibre</p> <p> $\frac{\text{Ø}60 \text{ mm}}{\text{Ø}2.36''}$</p> <p>Total no. = 1</p>	<p>9*</p> <p> = Alu.</p> <p> $\frac{\text{Ø}32 \text{ mm}}{\text{Ø}1.26''}$</p> <p>Total no. = 1</p>	<p>10*</p> <p> = Alu.</p> <p> $\frac{\text{Ø}22 \text{ mm}}{\text{Ø}0.87''}$</p> <p>Total no. = 1</p>	<p>16</p> <p></p>	<p>17</p> <p> $\frac{\text{Ø}50 \text{ mm}}{\text{Ø}1.97''}$</p>
<p>18</p> <p> $\frac{\text{Ø}26 \text{ mm}}{\text{Ø}1.02''}$</p>	<p>19</p> <p> $\frac{\text{Ø}26 \text{ mm}}{\text{Ø}1.04''}$</p> <p>Total no. = 1</p>	<p>20</p> <p> $\frac{\text{Ø}44 \text{ mm}}{\text{Ø}1.73''}$</p> <p>Total no. = 1</p>			

* The spare part is included in the package but is not used for PM 1 or PM 3.