


Installation guide – Spare parts and accessories

Overhaul kit | Code number 032F2348
EVRAT / EVRST, size 20

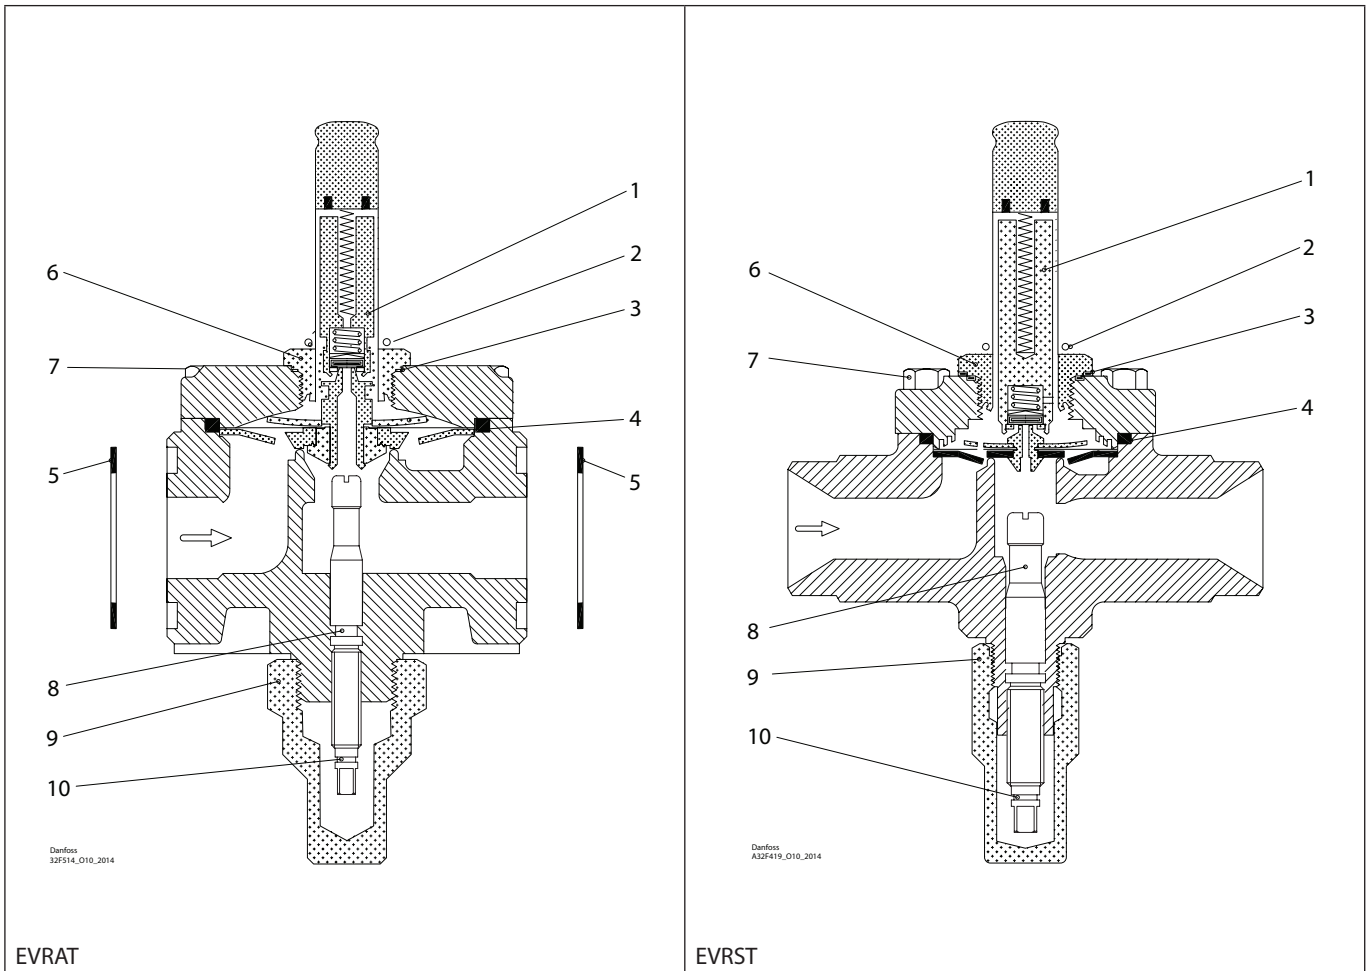

<p>1</p> <p>Ø31mm Ø1.22"</p> <p>Total no. = 1</p>	<p>2</p> <p>Ø14 mm Ø0.56"</p> <p>Total no. = 1</p>	<p>3</p> <p>= Alu.</p> <p>Ø27 mm Ø1.04"</p> <p>Total no. = 1</p>	<p>4</p> <p>= Rubber</p> <p>Ø64 mm Ø2.52"</p> <p>Total no. = 1</p>	<p>5</p> <p>= Fibre</p> <p>Ø39 mm Ø1.54"</p> <p>Total no. = 2</p>	<p>6</p> <p>51 mm 2.01"</p> <p>Total no. = 1</p>
<p>7</p> <p>25 mm 0.98"</p> <p>Total no. = 4</p>	<p>8</p> <p>70.5 mm 2.78"</p> <p>Total no. = 1</p>	<p>9</p> <p>NV 32 mm NV 1.26"</p> <p>Total no. = 1</p>	<p>10</p> <p>Ø5 mm Ø0.2"</p> <p>Total no. = 1</p>		