


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F0770
PMC, size 5

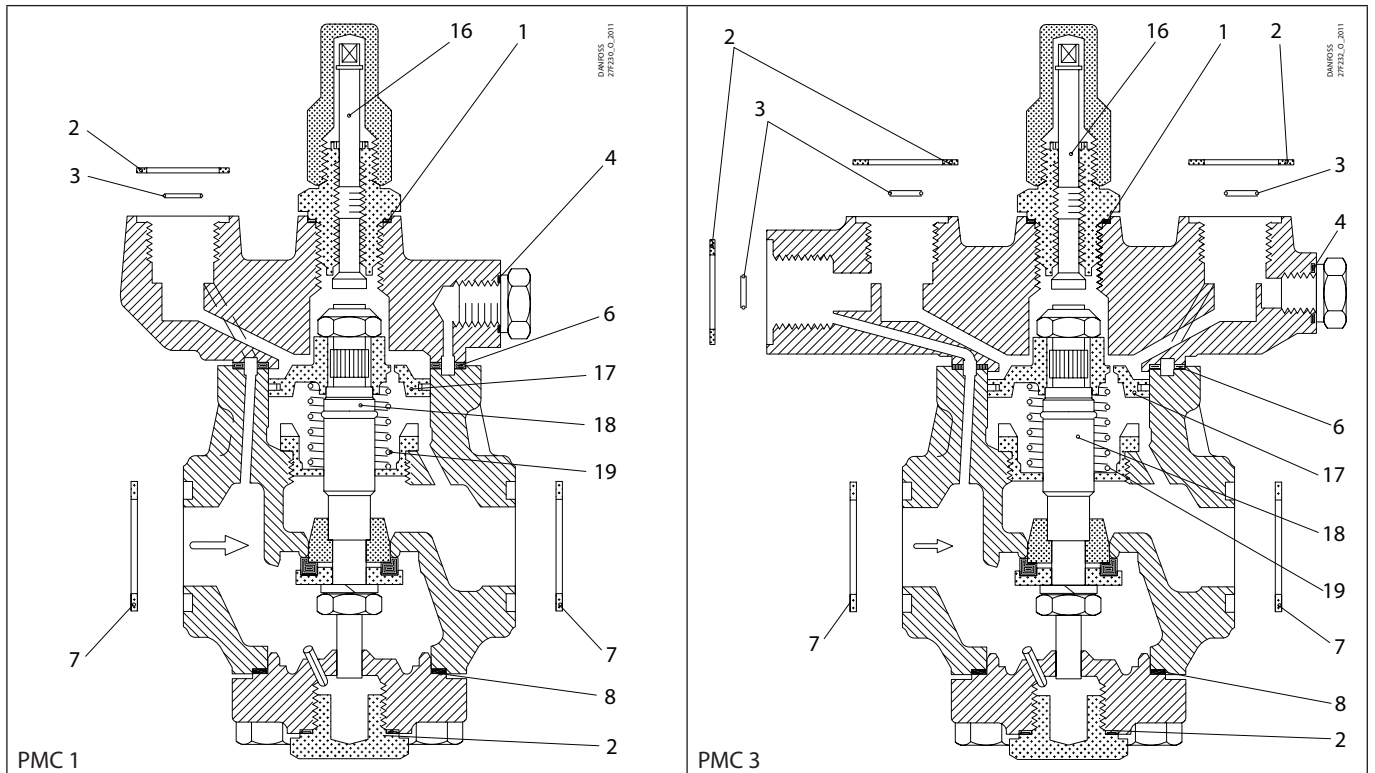

<p>1</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø26 mm Ø1.02"</p> <p>Total no. = 1</p>	<p>2</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø33 mm Ø1.28"</p> <p>Total no. = 4</p>	<p>3</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø9 mm Ø0.36"</p> <p>Total no. = 3</p>	<p>4</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø18 mm Ø0.70"</p> <p>Total no. = 1</p>	<p>5*</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø14 mm Ø0.55"</p> <p>Total no. = 1</p>	<p>6</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø75 mm Ø2.95"</p> <p>Total no. = 1</p>
<p>7</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø39 mm Ø1.54"</p> <p>Total no. = 2</p>	<p>8</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø60 mm Ø2.36"</p> <p>Total no. = 1</p>	<p>9*</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø32 mm Ø1.26"</p> <p>Total no. = 1</p>	<p>10*</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø22 mm Ø0.87"</p> <p>Total no. = 1</p>	<p>16</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p>	<p>17</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø50 mm Ø1.97"</p>
<p>18</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø26 mm Ø1.02"</p>	<p>19</p> <p> = Alu.</p> <p> = Fibre</p> <p> = Alu.</p> <p> = Fibre</p> <p>Ø26 mm Ø1.04"</p> <p>Total no. = 1</p>				

* The spare part is included in the package but is not used for PMC 1 or PMC 3..